

B & S PRODUCTS CO.
Hot Tap and Pipe Repair Products
800/424-6882 FAX 818/993-7020
www.bs-products.com

HOT-TAP-A-WELL INSTRUCTIONS

Install well assembly in 1" gate valve or full port ball valve after hot tapping main.

Grease copper well tube for ease of insertion.

Loosen compression nut so that ferrule does not drag on tubing.

Open gate valve and push copper well tube forward to required depth using a screwdriver in end of tube as a handle.

Hold pressure against tube and tighten compression nut to hold tube in position.

If threaded end is needed, trim end of tube to desired length and install 5/8" copper X 1/2" mps compression adapter.